


Taurus Dewatering Socks

Installation Instructions

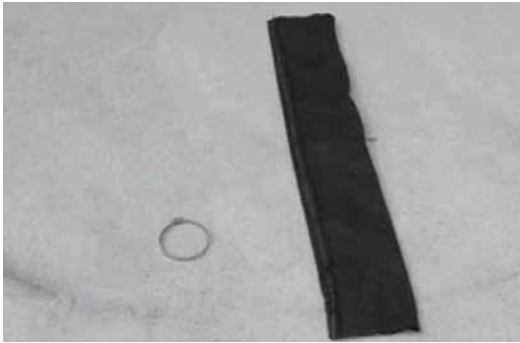

Step 1. Lay out the dewatering sock and gather all needed materials, including a clamp.



Step 2. Slide loosened clamp over a pipe or hose.



Step 3. Insert the pipe, hose or discharge into the sock. The clamp should be kept far back on the hose/pipe so that it does not enter the sock area.



Step 4. Squeeze the dewatering sock tightly to the pipe/hose. Slide the clamp over the sock so that it is covering both the sock and the hose/pipe.



Step 5. Tighten the clamp so that it firmly secures the sock to the hose. The clamp should be tight enough so that no excess water or materials are flowing out of the sock during the filtration process.



GEI
WORKS